

PORTABILITY KIT INSTALLATION

PORTABILITY KIT PART NUMBER: PA0650195

TOOLS REQUIRED: 8mm, 10mm, and 12mm sockets and ratchets, block(s) of wood (minimum of 6" tall).

WHEEL INSTALLATION


1. Block up the alternator end of generator to install wheel kit.
2. Slide axle (**item 85**) through the wheel bracket on the carrier.
3. Thread M12 nut (**item 77**) onto the axle and tighten to securely clamp the axle to the carrier.
4. Slide the wheel (**item 74**) onto the axle.
5. Secure the wheel to the axle with the M10 lock nut (**item 86**).
6. Repeat above instructions for the remaining wheel.


FOOT INSTALLATION

1. Blocking up the engine side of the generator, assemble the rubber foot (**item 73**) to the carrier (align with holes in tubing) using two M6 x 40 bolts (**item 78**). Thread M6 nuts (**item 79**) to the bolts to secure the assembly.
2. Repeat above instructions for the remaining foot.

HANDLE INSTALLATION

1. Assemble the handle (**items 80, 81, 87 and 88**) to the carrier (align with hole in tubing). Thread an M8 nut (**item 88**) to the bolt to secure the assembly.
2. Repeat above instructions for the remaining handle.

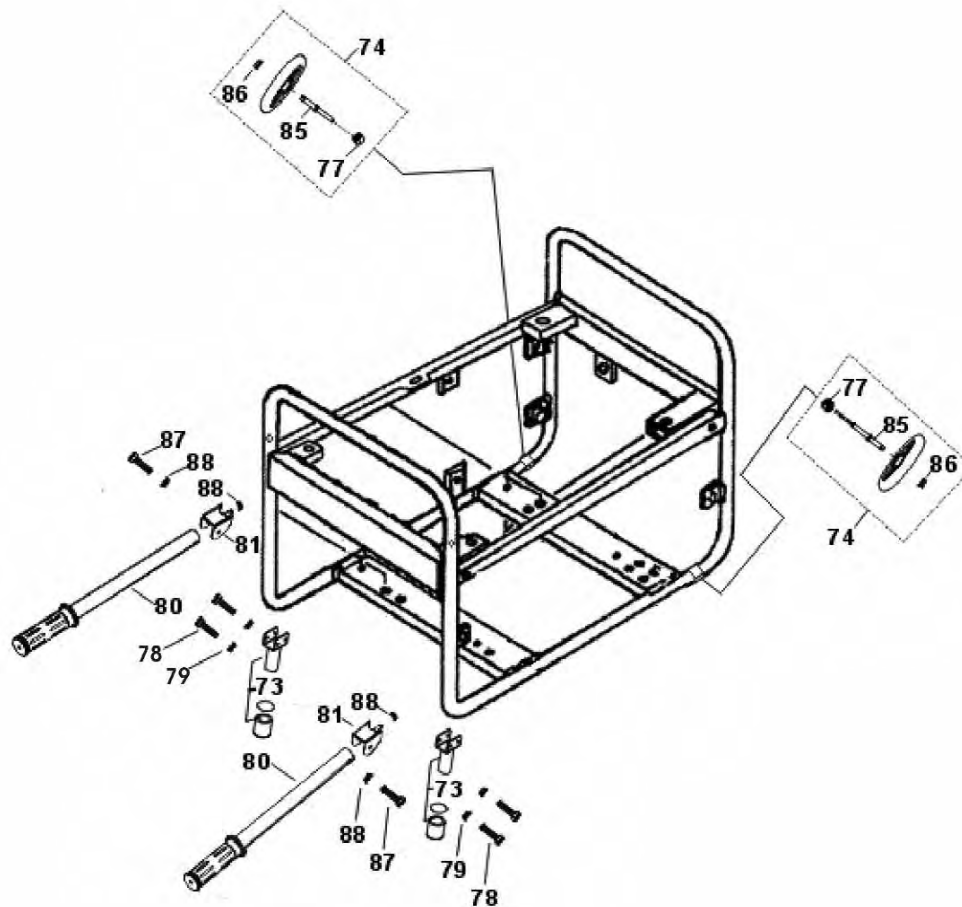

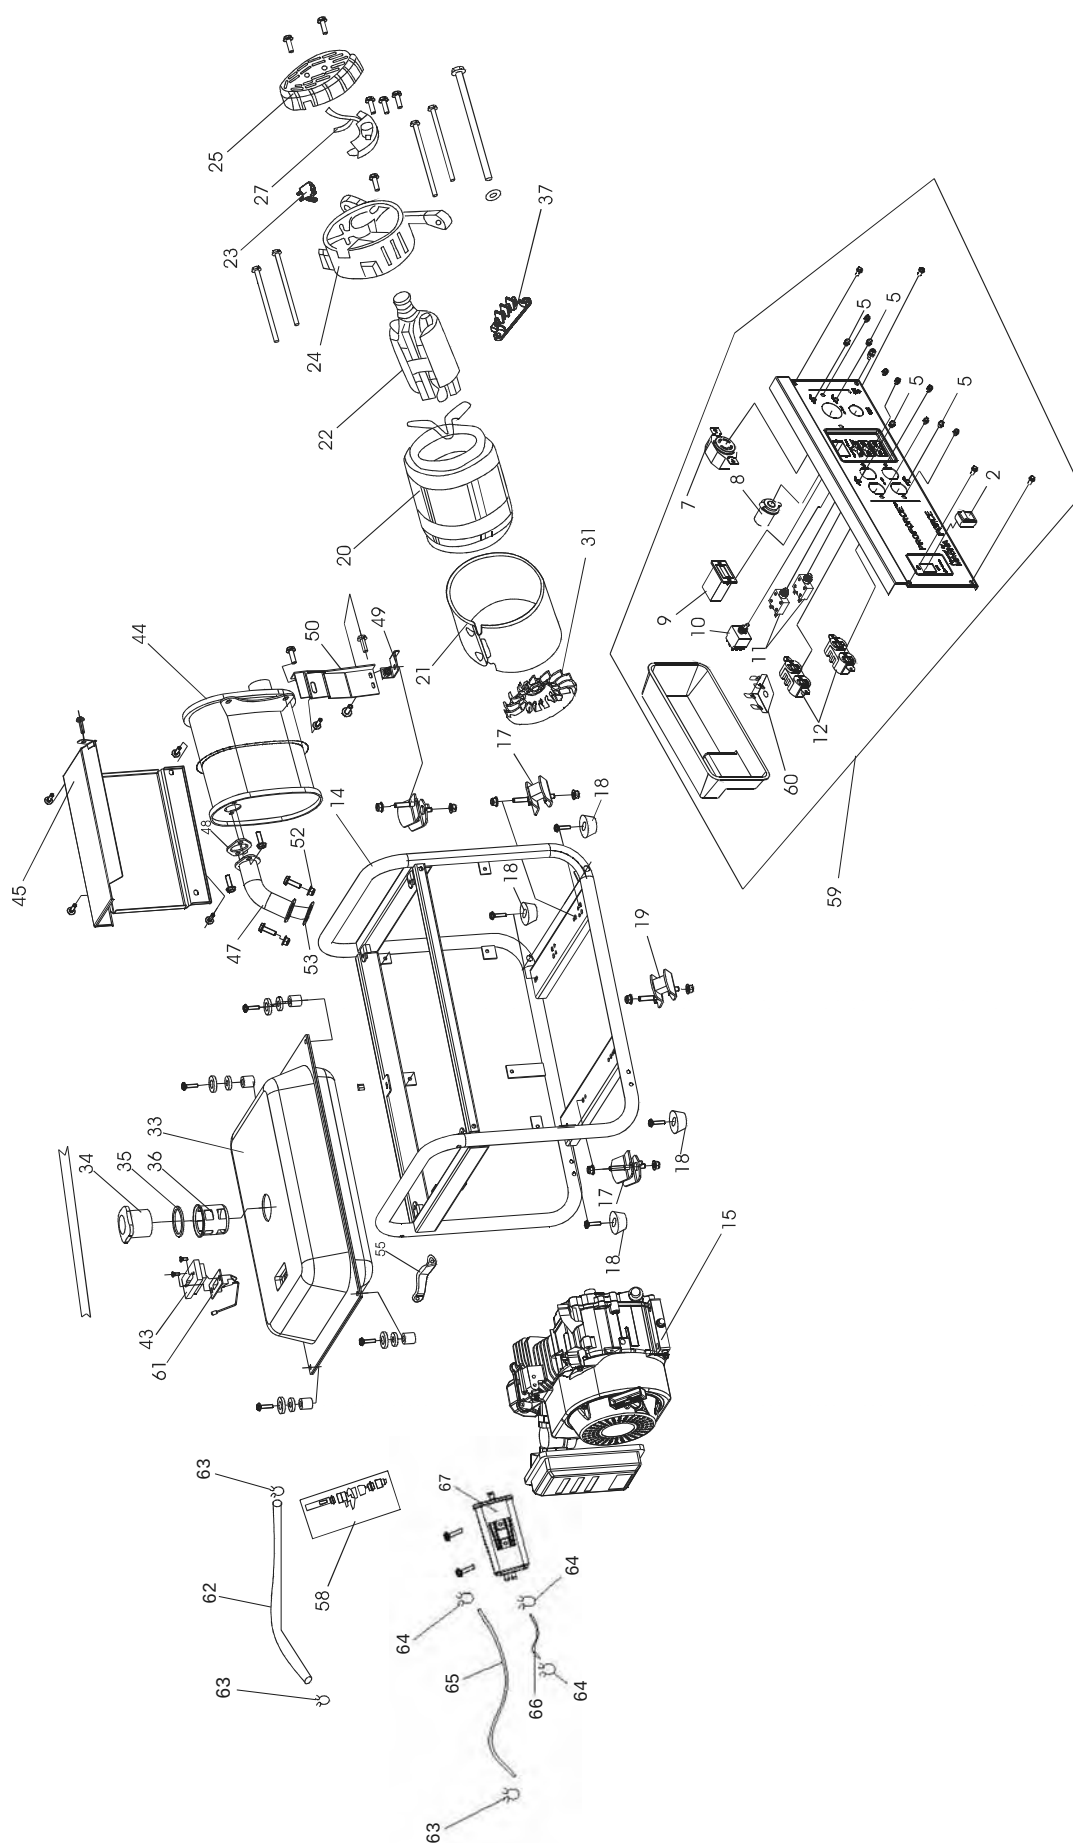

PARTS LIST / LISTE DES PIÈCES / LISTA DE PIEZAS - PMC103004					
REF. NO.	PART NO.	DESCRIPTION	DESCRIPTION	DESCRIPCIÓN	QTY
2	0067126	Ignition switch	Interrupteur	Interruptor	1
5	0067127	Power indicator	Alimenter l'indicateur	Enchufe indicador	4
7	0049365	Receptacle L14-30R	Prise L14-30R	Receptáculo L14-30R	1
8	0061990	Receptacle DC	Prise CC	Receptáculo CC	1
9	0067128	Hour meter	Horomètre	Contador Horario	1
10	0067129	Voltage selector	Sélecteur de Tension	Selector de Voltaje	1
11	0049070	Circuit Breaker 15 amp	Disjoncteurs 15 amp	Cortacircuitos 15 amp	2
12	0037762.01	Receptacle 5-20R	Prise 5-20R	Receptáculo 5-20R	2
14	0067729	Frame	Cadre	Marco	1
15	0067728	Engine 196 cc CARB	Moteur 196 cc CARB	Motor 196 cc CARB	1
17	0067131	Isolator A	Sectionneur A	Aislador A	2
18	0067132	Isolator	Sectionneur	Aislador	4
19	0067133	Isolator B	Sectionneur B	Aislador B	2
20	0067134	Stator 3 KW 60 HZ	Stator	Estator	1
21	0067135	Cover, stator	Couvercle, stator	Tapa, estator	1
22	0067136	Rotor 3 KW	Rotor	Rotor	1
23	0067137	Brush module	Brosser le module	Cepille módulo	1
24	0067138	Stay, generator	Séjour	Permanezca	1
25	0067139	Cover, end	Couvercle	Tapa	1
27	0067140	Voltage regulator	La tension régulatrice	El regulador del voltaje	1
31	0067141	Fan	Ventilateur	Ventilador	1
33	0067730	Fuel tank	Réservoir de carburant	Tanque de metal de combustible	1
34	0067731	Fuel cap	Capuchon	Tapa de combustible	1
35	0067144	Packing ring	Anneau emballant	Anillo que empaca	1
36	0067145	Fuel filter	Filtre à carburant	Filtro de combustible	1
37	0067146	Connection board	Conseil de connexion	Tabla de conexión	1
43	0067148	Gasket, fuel gauge	Joint	Empaquetadura	1
44	0067149	Muffler	Silencieux	Silenciador	1
45	0067150	Guard, muffler	Garant	Protector	1
47	0067151	Exhaust pipe	Tuyau d'échappement	Tubo de descarga	1
48	0067152	Gasket, muffler	Joint	Empaquetadura	1
49	0067153	Supporting plate	Plaque	Placa	1
50	0067154	Stay, muffler	Séjour	Permanezca	1
53	0067155	Gasket, exhaust	Joint	Empaquetadura	1
55	0067156	Bracket, air cleaner	Support	Soporte	1
58	0067157	Fuel cock	Alimenter le coq	Abastezca de combustible gallo	1
59	0067158	Panel, wired	Tableau complet câblé	Panel, cableado completo	1
60	0067159	Rectifier	Redresseur	Rectificador	1
61	0067147	Fuel gauge	Jauge de carburant	Indicador de combustible	1
62	0067732	Fuel hose	Flexible de carburant	Manguera de combustible	1
63	0067733	Clip, small	Petit attache	Pequeño presilla	3
64	0067734	Clip, large	Grand attache	Presilla grande	3
65	0067735	Fuel tube, long	Tube de carburant, longtemps	Tubo de combustible, mucho tiempo	1
66	0067736	Fuel tube, short	Tube de carburant, court	Tubo de combustible, brevemente	1
67	0067737	Carbon Canister	Cartouche de carbone	Canastillo de carbón	1




WARNING: To avoid possible personal injury or equipment damage, a registered electrician or an authorized service representative should perform installation and all service. Under no circumstances should an unqualified person attempt to wire into a utility circuit.



AVERTISSEMENT: Pour éviter toute blessure personnelle ou dommage à l'équipement, l'installation et tout entretien devraient être effectués par un électricien qualifié ou un préposé au service autorisé. En aucun cas, une personne non-qualifiée ne devrait essayer de faire le raccord au circuit principal.



ADVERTENCIA: Para evitar posibles lesiones físicas o daños materiales, es necesario que la instalación y todo el servicio sea realizado por un electricista matriculado o representante de servicio autorizado. Bajo ninguna circunstancia debe permitirse que una persona que no está capacitada trate de manipular cables dentro del circuito de servicio eléctrico.

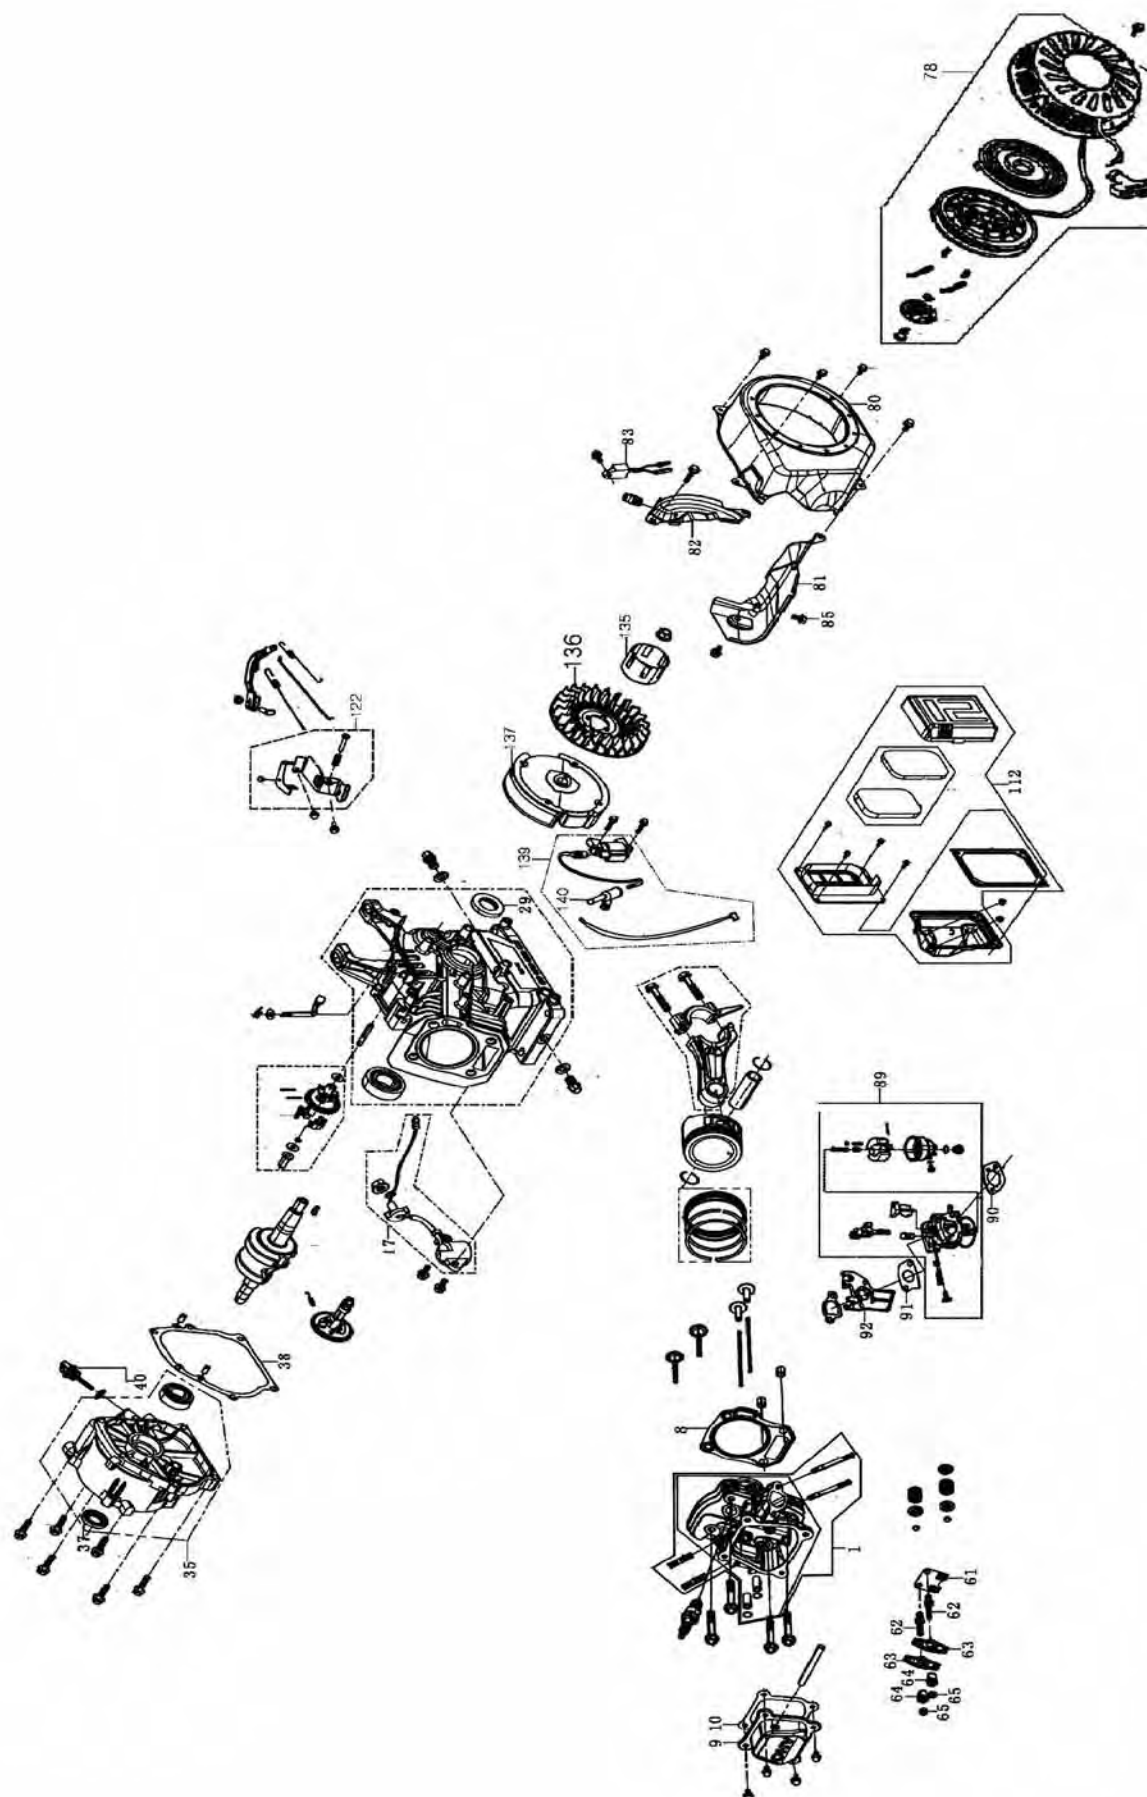

ENGINE PARTS LIST / LISTE DES PIÈCES DU MOTEUR / LISTA DE PIEZAS DEL MOTOR					
REF. NO.	PART NO.	DESCRIPTION	DESCRIPTION	DESCRIPCIÓN	QTY
1	0067160	Cylinder head assembly	Ensemble de tete de cylindre	Conjunto de cabezal de cilindro	1
8	0067161	Gasket, cylinder head	Joint	Empaquetadura	1
9	0067162	Cover, cylinder head	Couvercle	Tapa	1
10	0067163	Gasket, cylinder head cover	Joint	Empaquetadura	1
17	0067164	Sensor, engine oil	Détecteur	Sensor	1
29	0067165	Oil seal	Joint	Sello	1
35	0067166	Cover, crankcase	Couvercle	Tapa	1
37	0067167	Oil seal	Joint	Sello	1
38	0067168	Gasket, crankcase	Joint	Empaquetadura	1
40	0067169	Oil dipstick	Jauge de niveau d'huile	Varilla de aceite	1
61	0067170	Plate, lifter stopper	Plaque	Placa	1
62	0067171	Bolt, valve adjusting	Boulon	Perno	2
63	0067172	Rocker valve	Soupape	Válvula	2
64	0067173	Nut, valve adjusting	Écrous	Tuerca	2
65	0067174	Bolt, valve adjusting	Boulon	Perno	2
78	0067175	Engine recoil assembly	Moteur recule l'assemblée	Asamblea de retráctil de motor	1
80	0067176	Shroud	Enveloppe	Guardera	1
81	0067177	Shroud, cylinder body	Enveloppe	Guardera	1
82	0067178	Shield, lower	Garant	Pantalla	1
83	0067179	Protector, oil	Protecteur	Protector	1
89	0067180	Carburetor	Carburateur	Carburador	1
90	0067181	Gasket, air cleaner	Joint	Empaquetadura	1
91	0067182	Gasket, carburetor	Joint	Empaquetadura	1
92	0067183	Plate, carburetor insulator	Plaque	Placa	1
112	0067738	Air cleaner CARB	Aérer le nettoyeur CARB	Limpiador aéreo CARB	1
122	0067185	Throttle control assembly	Etrangler l'assemblée de contrôle	Estrangule la asamblea de control	1
135	0067186	Pulley, starter	Poulie	Polea	1
136	0067187	Impeller	Impeller	Impeller	1
137	0067188	Flywheel	Volant-moteur	Volante	1
139	0067189	Coil, ignition	Bobine d'allumage	Bobina de encendido	1
140	0067190	Cap, spark plug	Capuchon	Tapa	1